


Instruction of Firmware

——Reading Before Updating

Check the current version of the PCS before updating, the firmware version is shown on the screen as below.

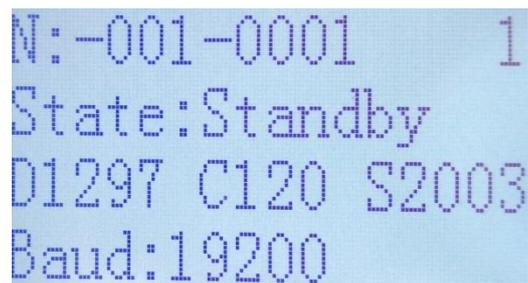

```
N:-001-0001 1
State:Standby
D1297 C120 S2003
Baud:19200
```

Firmware Version: D1297 C120 S2003

D1297 means the DSP version is 1297, C120 means the screen version is 120, S2003 means the monitor version is 2003.

There are two chips type of the monitor, ST chip and GD chip. And the firmware corresponding to these two chips are different. Please check whether your inverter uses ST or GD chip, and then update the corresponding firmware.

Q: How to confirm whether ST or GD chip is used?

A: The first number of ST chip (monitor version) is 2. And the first number of GD chip (monitor version) is 6.

If you cannot confirm the above, please directly contact Sinexcel.

esms-aftersales@sinexcel.us