


Instruction of Firmware

——Reading Before Updating

Check the current version of the PCS before updating, the firmware version is shown on the screen as below.

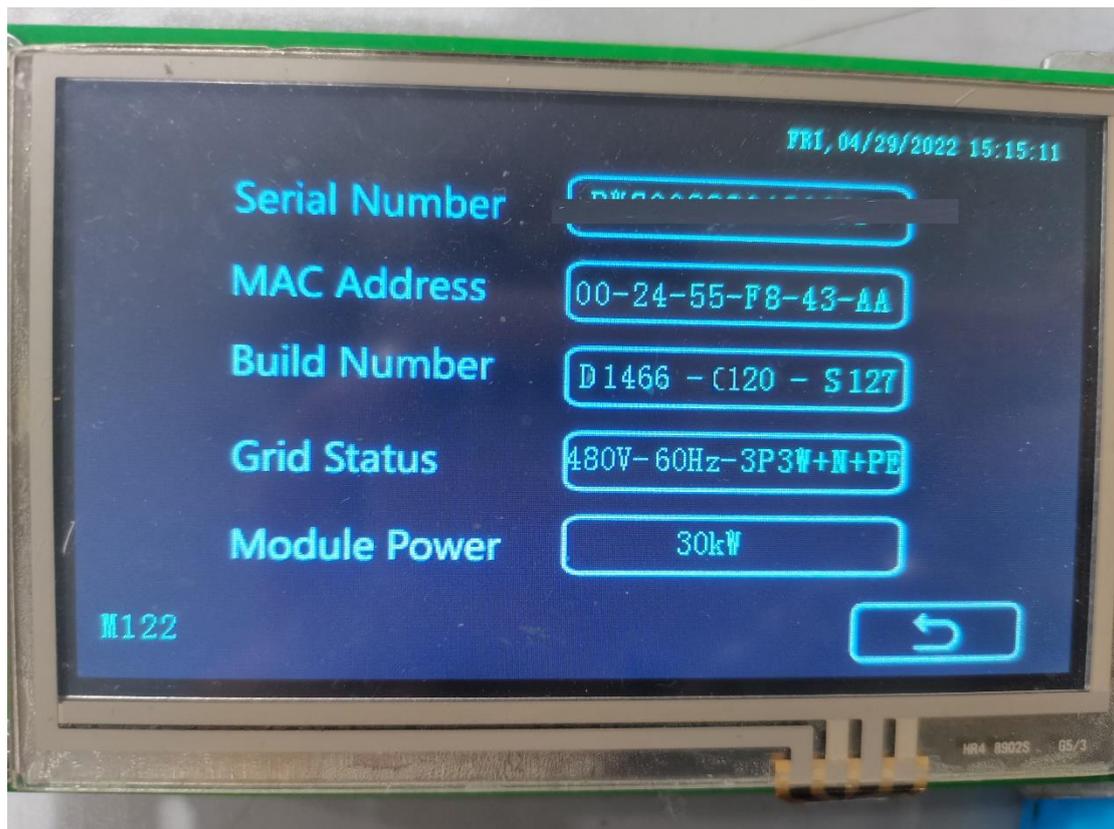

Firmware Version: D1466 C120 S127

D1466 means the DSP version is 1466, C120 means the screen version is 120, S127 means the monitor version is 127.

There are two chips type of the monitor, ST chip and GD chip. And the firmware corresponding to these two chips are different. Please check whether your inverter uses ST or GD chip, and then update the

corresponding firmware.

Q: How to confirm whether ST or GD chip is used?

A: For the three-phase inverter, the first number of ST chip (monitor version) is 1. And the first number of GD chip (monitor version) is 5.

For the split-phase inverter, the first number of ST chip (monitor version) is 3. And the first number of GD chip (monitor version) is 7.

If you cannot confirm the above, please directly contact Sinexcel.

esms-aftersales@sinexcel.us